

# OBM Monitor Firmware Update Guide



## 1. Model

All OBM-U/W/P/N Series monitors

## 2. Preparation

- 1) Download the latest firmware files from the Postium website.  
<http://www.postium.com/support/firmware.php?link=support&url=postium.com&page=firm>
- 2) Copy the firmware files to the top folder of USB memory stick.  
(The USB file system should be FAT32.)

## 3. Update the firmware

- 1) Turn On the monitor, and insert the USB to the monitor.
- 2) Turn Off the main power switch on the rear case.
- 3) Turn On the main power switch, and the firmware will start updating.
- 4) After the firmware update is finished (If the button LED stops blinking, it means the update is finished), turn off and on the main power switch again.
- 5) Check if the firmware update is correctly done in the OSD menu.  
Where : Status > Board Version

## How to check

The Board Version is displayed in order of CPU, GPU, FPGA.

For example, if the following files are updated, the Board Version will say **05/04/03**.

OBM-Nxxx\_CPU\_V**05**.bin  
OBM-Nxxx\_GPU\_V**04**.bin  
OBM-Nxxx\_FPGA\_V**03**.bin

