

# OBM Monitor Firmware Update Guide



## 1. Model

All OBM-U/W/P/N Series monitors

## 2. Preparation

- 1) Download the latest firmware files from the Postium website.  
<http://www.postium.com/support/firmware.php?link=support&url=postium.com&page=firm>
- 2) Copy the firmware files to the top folder of USB memory stick.  
(The USB file system should be FAT32.)

## 3. Update the firmware

- 1) Turn On the monitor, and insert the USB to the monitor.
- 2) Turn Off the main power switch on the rear case.
- 3) Turn On the main power switch, and the firmware will start updating.
- 4) When the firmware update is finished (If all the button LED stops blinking, it means the update is finished.), remove the USB, and turn off and on the main power switch on the rear case.
- 5) Check if the firmware update is correctly done in the OSD menu.  
Where : Status > Board Version

## How to check

The Board Version is displayed in order of CPU, GPU, FPGA.  
For example, if the following files are updated, the Board Version will say **05/04/03**.

OBM-Nxxx\_CPU\_V**05**.bin  
OBM-Nxxx\_GPU\_V**04**.bin  
OBM-Nxxx\_FPGA\_V**03**.bin

